

Tenant Guide: Changing a Lightbulb



Tenants are responsible for changing lightbulbs in properties.
Below are some tips to help you with this.

How To:

STANDARD LIGHTBULB

Most lights use these types of bulbs. To replace them, first, turn off the light. If it's a screw-in bulb, simply unscrew the old one and screw in the new one. For a bayonet bulb, gently push it in, turn it to the left, and pull it out from the holder. To install the new bulb, push it back in, twist it to the right, and secure it in place.

To ensure you buy the correct bulb, bring the old one with you to the store or take a picture beforehand.

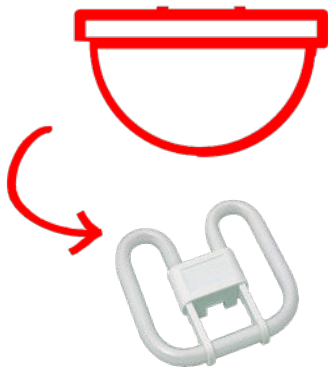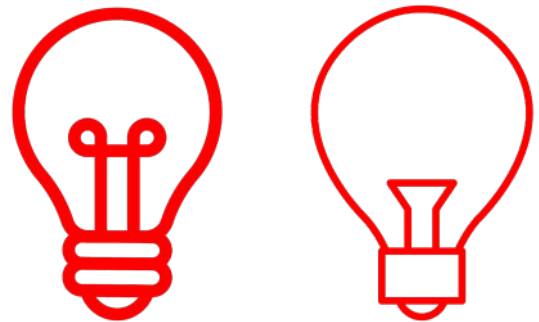

BATHROOM LIGHTS

Some bathroom lights have this type of fitting. To replace the bulb, either unscrew the screws on the cover or twist it to the left, depending on the design.

Then, pull the old bulb down and slot the new one into place. The required bulb could be a 16W 2-pin 2D lamp or a 16W 4-pin 2D lamp. If you're unsure, bring the old bulb to the shop as an example.

Spotlights

These are the fittings used for spotlights, which will either unplug or unscrew. To ensure you get the correct replacement, bring the old bulb or a picture of it to the shop.

